

Alluminare Lighting Installation Instructions Adjustable Stem-Hung Double Socket Pendant

You should have received in this kit:

A. 1 Canopy

B. Mounting Kit



C. Stem pieces*

D. Stem Support Kit


E. 1 Cordset

You will also need to have:


- 1 Philips head screwdriver
- 1 flat head screw driver
- 1 wirestripper
- 2 wire nuts

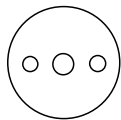

1 Crossbar

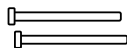

2 Screws

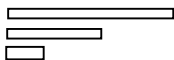

* Quantity and sizes vary by model. See details at bottom of page.




Lock washer



Locknut



Decorative Check Ring

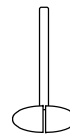




Cord

Double Socket

(drawings not to scale)

How to Install

WARNING: Before wiring to the power supply, turn off the electricity at the fuse or circuit breaker box. Ensure grounding to avoid potential shock and to ensure reliable performance.

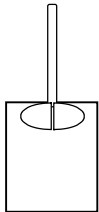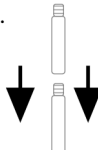1. If you are replacing an old fixture, first uninstall it from the junction box in the ceiling. If you do not have a junction box, consult a qualified professional electrician to have one installed.
2. Check the house wires, which extend from the junction box, for loose or damaged wiring. If they are loose or damaged, they **MUST** be repaired before installing your Alluminare fixture. **DO NOT PROCEED UNTIL DAMAGED WIRING HAS BEEN REPAIRED OR REPLACED.**
3. Slide Cordset through washer fitter in top of the shade, so that the threaded rod at the top of the socket sticks through the washer fitter.  Step 3
4. Choose the best configuration of stems to get the desired length from your ceiling. If your pendant will be hanging over a table or counter, we recommend a configuration that puts the bottom of your fixture shade 28 to 32 inches above the table or counter surface. For maximum stability, we recommend using the smaller pieces at the bottom and the larger pieces at the top.
5. Slide the first stem over Cord and screw onto threaded rod at the top of the socket so that the shade is held firmly in place.
6. One at a time, slide the other chosen stems over Cord and screw into place.  Step 6
7. When all desired stems have been added, slide the Decorative Check Ring over the Cord and rest it on the threaded part of the uppermost stem.
8. Slide the Cord through the center hole of the Canopy and attach the Stem to the Canopy using the lock washer and locknut.
9. Tie a knot in the Cord so that it rests just inside the Canopy. Slide center hole of Crossbar over remaining Cord, then trim Cord to get rid of excess. Leave about 2 inches of Cord remaining.
10. Within the Cord are a black, white and green wire. Use wire stripper to expose 1/2 inch of each. Use wire stripper again to expose about 1/4 inch of the copper filaments within wires.  Step 10
11. Twist the exposed copper filaments from the black fixture wire around those of the black house wire and secure with a wire nut. Do the same with the white and green wires.
12. Insert the Screws up through the two smaller holes on the Canopy, through the matching holes in the Crossbar, and use Philips head screwdriver to screw into appropriate holes in junction box. Make sure that all loose wiring is completely inside the Canopy.
13. If your Alluminare fixture came with a diffuser, attach the diffuser using the Diffuser Installation Instructions.

Congratulations! Your Alluminare fixture is now installed and ready to use!

STEMS15 includes:

- 1 3-inch stem
- 1 12-inch stem

STEMS36 includes:

- 1 12-inch stem
- 1 24-inch stem

STEMS51 includes:

- 1 3-inch stem
- 2 12-inch stems
- 1 24-inch stem