


Alluminare Lighting Installation Instructions Stem-Hung Pendant

You should have received in this kit:

- A. 1 Canopy B. 1 Crossbar C. 2 Screws D. 1 Stem E. 1 Cordset F. 2 Griprings F. Connector (2 parts)

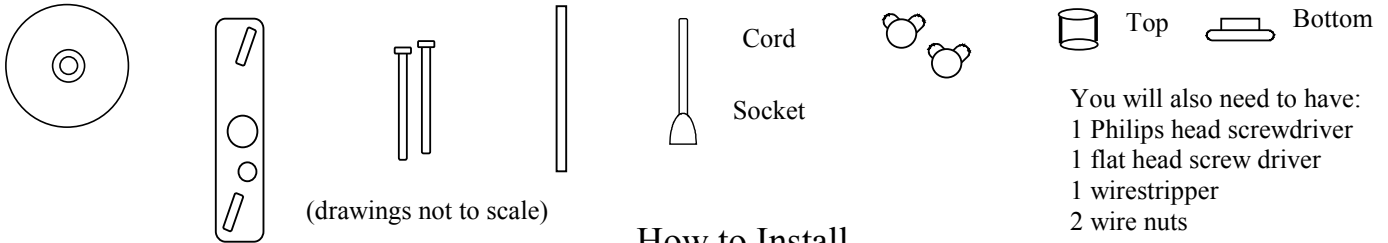


You will also need to have:
 1 Philips head screwdriver
 1 flat head screw driver
 1 wirestripper
 2 wire nuts

WARNING: Before wiring to the power supply, turn off the electricity at the fuse or circuit breaker box. Ensure grounding to avoid potential shock and to ensure reliable performance.


1. If you are replacing an old fixture, first uninstall it from the junction box in the ceiling. If you do not have a junction box, consult a qualified professional electrician to have one installed.
2. Check the house wires, which extend from the junction box, for loose or damaged wiring. If they are loose or damaged, they **MUST** be repaired before installing your Alluminare fixture. **DO NOT PROCEED UNTIL DAMAGED WIRING HAS BEEN REPAIRED OR REPLACED.**

3. Slide Cordset through washer fitter in top of the shade, so that the threaded rod at the top of the socket sticks through the washer fitter. Slide Bottom Connector over Cord and screw onto rod so that the shade is held firmly in place. Repeat with Top Connector.

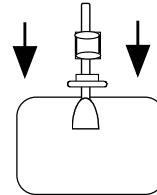

4. After cutting the Stem to the desired length with a hacksaw, slide Stem over cordset and screw into Top Connector.
5. Loosen, but do not remove, screw on Canopy and slide it over Stem. Do not tighten screw yet.

6. Loosen, but do not remove, screws on both Griprings. Slide one over Stem, then slide Crossbar over stem so that green ground screw is facing up. Slide second Gripring over Stem, position it at the top of Stem, then re-tighten screws.

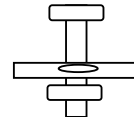

7. Tie a knot in the Cord so that it rests just above the top of the Stem, then trim Cord to get rid of excess. Leave about 2 inches of Cord remaining.

8. Within the Cord are a black wire and a white wire. Use wire stripper to expose 1/2 inch of each. Use wire stripper again to expose about 1/4 inch of the copper filaments within wires.



9. Twist the exposed copper filaments from the black fixture wire around those of the black house wire and secure with a wire nut. Do the same with the white wires.

10. Wrap the exposed copper filaments of the green house wire around the "GND" screw on the Crossbar and tighten the screw with flat head screwdriver.

11. Insert the Screws up through two holes in the Crossbar, and use Philips head screwdriver to screw into appropriate holes in junction box. Move bottom Gripring up against Crossbar and tighten screws. Then move Canopy up against bottom Gripring, making sure that all loose wiring is completely inside the Canopy, and tighten screw.

12. If your Alluminare fixture came with a diffuser, attach the diffuser using the Diffuser Installation Instructions.

Congratulations! Your Alluminare fixture is now installed and ready to use!